

**C.S.A. CERTIFIED
GLOWING EMBERS
GAS FIREPLACE
LOG SET**

Charred Oak Designer (CHDG5-24) shown

**INSTALLATION
AND
OPERATING
INSTRUCTIONS****G5 SERIES FOR NATURAL OR PROPANE GAS**

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Open a window.
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone and follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by an NFI Certified or other qualified professional installer, service agency or the gas supplier.



We recommend that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION OF YOUR LOG SET

Your Peterson Real-Fyre gas log set is to be installed only in a solid-fuel burning fireplace with a working flue and constructed of noncombustible material. Solid fuels shall not be burned in a fireplace where this gas log set is installed. The installation, including provisions for combustion, ventilation air and required minimum permanent vent opening, must conform with the National Fuel Gas Code (Z223.1/NFPA 54) and applicable local building codes. In Canada, the installation must conform with the current CAN/CGA B149.1, and B149.2 Installation Code. A Damper Stop Clamp is included to maintain the minimum permanent vent opening and to prevent full closure of the damper blade. **The chimney damper should be fully opened when burning the log set. Your log set is designed to burn with yellow flames; thus adequate ventilation is absolutely necessary.**

INSTALLER & CONSUMER:
These instructions MUST be retained with this appliance.



IMPORTANT: For safe operation and proper performance and to comply with CSA Certification, ONLY Robert H. Peterson parts and accessories must be used with this gas log set.

ROBERT H. PETERSON CO. 14724 East Proctor Ave., City of Industry, CA 91746

ROBERT H. PETERSON CO.



**CENDRE ARDENTS
ENTHOUSIASTES
ASPHYXIENT
CHEMINÉE
TRONÇONNE
L'ENSEMBLE C.S.A./
C.G.A. CERTIFIÉ**

Charred Oak Designer (CHDG5-24)
shown



**INSTALLATION ET
DIRECTIVES QUI
OPERE**

G5 SÉRIE POUR NATUREL Ou PROPANE ASPHYXIE

AVERTISSEMENT: Si les informations dans ce manuel ne sont pas suivies exactement, un feu ou explosion peut résulter cause propriété endommage, blessure personnelle ou perte de vie.

Ne mettez pas en réserve ou utilisez de l'essence ou autre vapeurs inflammables et liquides dans le voisinage de celui-ci ou tout autre appareil.

CE QUI Faire Si VOUS avez SENTI le GAZ

- n'essaie pas d'allumer de l'appareil.
- ne touche pas de changement électrique; ne utilisez pas du téléphone dans votre bâtiment.
- appelle Immédiatement votre fournisseur du gaz du téléphone d'un voisin et suit les directives des fournisseur du gaz.
- Si vous ne pouvez pas atteindre votre fournisseur du gaz, appelle le département du feu.

L'installation et service doivent être exécutés par un NFI Certified ou autre installateur qualifié, professionnel, agence du service ou le fournisseur du gaz.



We recommend that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

IMPORTANT: LISEZ CES DIRECTIVES AVANT AVEC SOIN de COMMENCER INSTALLATION De VOTRE GROSSE BUCHE a MIS

Votre Vrai-Fyre ensemble de notation de gaz de Peterson doit être installée seulement dans une cheminée brûlante de plein-carburant avec une conduite de cheminée fonctionnante et être construit avec du matériel non-combustible. Combustibles solides ne seront pas brûlent dans une cheminée où un gaz tronçonne l'ensemble est installé. Le minimum permanent décharge l'ouverture a fourni par la cheminée de la cheminée ou cheminée plus humide décharger les produits du [flue] est inscrit sur page 3. La cheminée plus humide doit être arranger maintenir dans une manière le minimum permanent décharge l'ouverture. L'installation, y compris vivres pour combustion et ventilation aère, doit conformer avec le National américain le Code du Gaz de la Combustible du National Standard (Z223.1/NFPA 54) et codes du bâtiment applicables locaux. Au Canada l'installation doit conformer avec le courant PEUT/CGA B149.1 et B149.2 Installation Code. La Douche froide de cheminée devrait être ouverte pleinement quand brûler l'ensemble du journal. Votre ensemble du journal est conçu pour brûler avec les flammes du jaune; donc la ventilation adéquate est absolument nécessaire.

INSTALLATEUR & CONSOMMATEUR: Ces directives doivent être retenues avec cet appareil.



IMPORTANT: Pour opération sûre et performance adéquate et pour se conformer avec Certification CSA, SEULEMENT Robert H. Peterson part et les accessoires doivent être utilisés avec cet ensemble de la grosse bûche du gaz.

ROBERT H. PETERSON CO. 14724 East Proctor Ave., City of Industry, CA 91746

IMPORTANT INFORMATION

Do not use this log set if any part has been under water. Immediately call a qualified, professional service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

The gas log set must be isolated from the gas supply piping system by closing its individual shut-off valve during any pressure testing of the gas supply system at test pressures equal to or less than 1/2 psig. The gas log set and its individual shut-off valve must be disconnected from the gas supply piping system when testing at pressures in excess of 1/2 psig.

Keep the area of the gas log set clear and free from combustible materials, gasoline and other flammable vapors and liquids.

MAINTENANCE: Periodically remove the logs and examine the burner assembly. If dirty, clean with a stiff brush. Also examine the area around burner and pilot. Any dirt or lint in this area should be removed. This will ensure long life and trouble-free operation.

An annual inspection and cleaning of the vent system by a qualified agency is recommended.

IMPORTANT: For safe operation and proper performance and to comply with CSA Certification, ONLY Robert H. Peterson parts and accessories must be used with this gas log set.

The minimum inlet gas supply pressure for purpose of input adjustment is 5" for natural gas and 10" for propane gas. Maximum inlet gas supply pressure for this burner is 10.5" for natural and 13" for propane gas.

A fireplace screen must be in place when the log set is burning and, unless other provisions for combustion air are provided, the screen shall have an opening(s) for introduction of combustion air. When a glass fireplace enclosure (door) is used, operate the gas log set with the glass doors open.

The minimum firebox dimensions in which log set is certified to be installed, is listed in the Technical Data Table below.

Your Real-Fyre Gas Log Set has been certified to the following standards:

ANSI Z21-60b-2004
CSA 2.26-2004

Real-Fyre G5 Series Technical Data Table					
Burner Size	Minimum Fire Box Dimensions			BTU Rating	
	Front Opening *	Depth	Height	Nat.	Propane
16"	26"	13"	18"	55,000	35,000
18"/20"	30"	13"	18"	75,000	45,000
24"	34"	14"	18"	90,000	65,000
30"	40"	14"	18"	96,000	75,000
36"	46"	14"	18"	96,000	75,000

**NOTE:
FOR REMOTE READY
UNITS, THE
MAXIMUM BTU
THRU PUT OF SOME
VALVES MAY VARY**

* An additional 2" / 3" is recommended to center the log set.

Minimum Free Opening Area of Chimney Damper for Venting								
For Factory Built Fireplaces Log Set Sizes					For Masonry Built Fireplaces Log Set Sizes			
Chimney Height	16"	18"&20"	24"	30"&36"	16"	18"&20"	24"	30"& 36"
15'	24 SQ"	36 SQ"	46 SQ"	49 SQ"	35 SQ"	46 SQ"	54 SQ"	58 SQ"
20'	21 SQ"	29 SQ"	38 SQ"	41 SQ"	32 SQ"	43 SQ"	49 SQ"	52 SQ"
25'	17 SQ"	26 SQ"	32 SQ"	35 SQ"	-	-	-	-
30'	16 SQ"	23 SQ"	29 SQ"	31 SQ"	29 SQ"	39 SQ"	45 SQ"	47 SQ"

NOTE: The minimum chimney height from hearth to top of chimney is 15'.


THE FOLLOWING LOG STYLES ARE NOT COMPATIBLE WITH THE G5 BURNER SYSTEM:

Royal English Oak Designer (BD), Heritage Oak Designer (HD), Charred Royal English Oak (CHB),
Royal English Oak (B), Heritage Oak (H), Mountain Oak (K), Driftwood (D).

ALL OTHER R. H. PETERSON LOG STYLES ARE COMPATIBLE.
CONSULT YOUR LOCAL REAL FYRE DEALER FOR A DEFINITIVE LIST

PARTS LIST FOR PETERSON REAL-FYRE C.S.A. CERTIFIED GLOWING EMBER GAS LOG SETS (G5 SERIES)

NOTE: The parts for the RDPG5-24 Golden Oak Designer Plus 24" Set are illustrated and listed. Log styles and part sizes will vary depending upon the G5 series log set ordered. When ordering replacement parts, be sure to indicate your log set model.

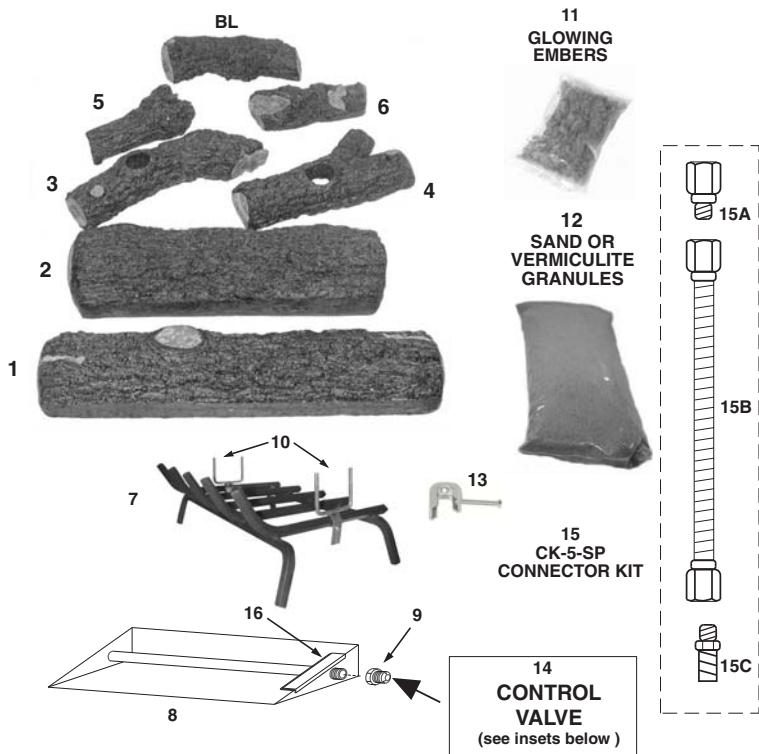



Item Description No.

- 1. front log
- 2. rear log
- 3. middle log
- 4. middle log
- 5. top log
- 6. top log
- BL. bonus log
- 7. grate
- 8. burner pan
- 9. fuel injector (natural gas only)
air mixer (propane gas only) not shown
- 10. log locator *
- 11. embers
- 12. select sand granules (NAT)
vermiculite granules (L.P.)
- 13. damper clamp
- 14. safety control system (inset)
- 15. connector kit
- 16. flame diverter bracket

* includes items:
#10-32 x 1 1/4" rd hd screw
#10-32 nut


Illustrations not to scale

MANUAL VALVE (SPK)

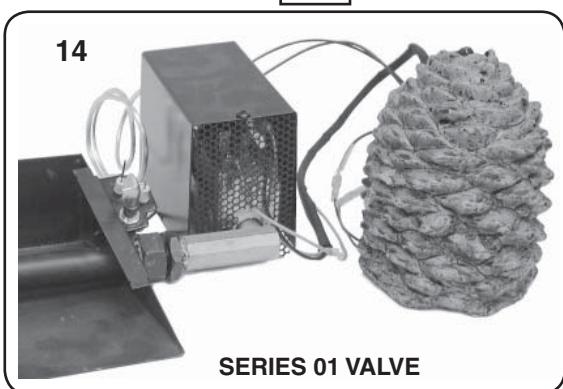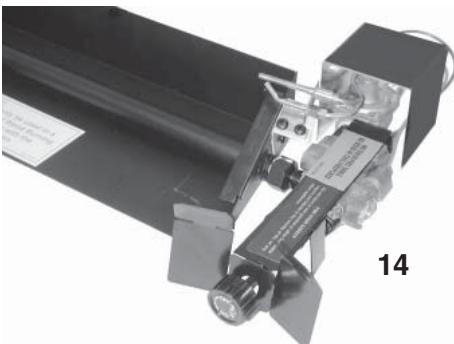


For all Valves see detailed information on
following pages

SAFETY CONTROL SYSTEM (Item No. 14) FOR MANUAL VALVE

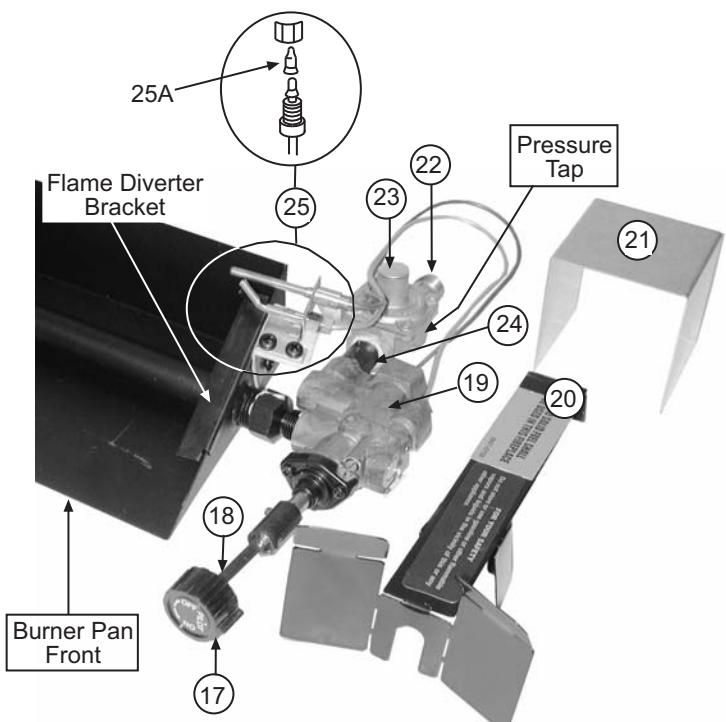

Item No.	Part No.	Description
17.	Control Knob	
18.	Extension	
19.	Manual SPK Valve	
20.	Manual (SV-19) Valve Cover	
21.	Regulator Cover	
22.	Adaptor, 1/2MFL x 3/8MPT	
23.	Pressure Regulator, Nat.Gas	
OR	Pressure Regulator, L.P. Gas	
24.	Nipple, 3/8 x 1.5"	
25.	Pilot Assembly, Natural Gas	
OR	Pilot assembly, L.P. Gas	
25A.	Natural Gas orifice or L.P. Gas orifice	
Replacement parts may be obtained from your nearest Real-Fyre Dealer. For assistance in locating a Dealer, contact the factory address listed on the front page.		

SAFETY CONTROL SYSTEM (Item No. 14) FOR 15 VALVE


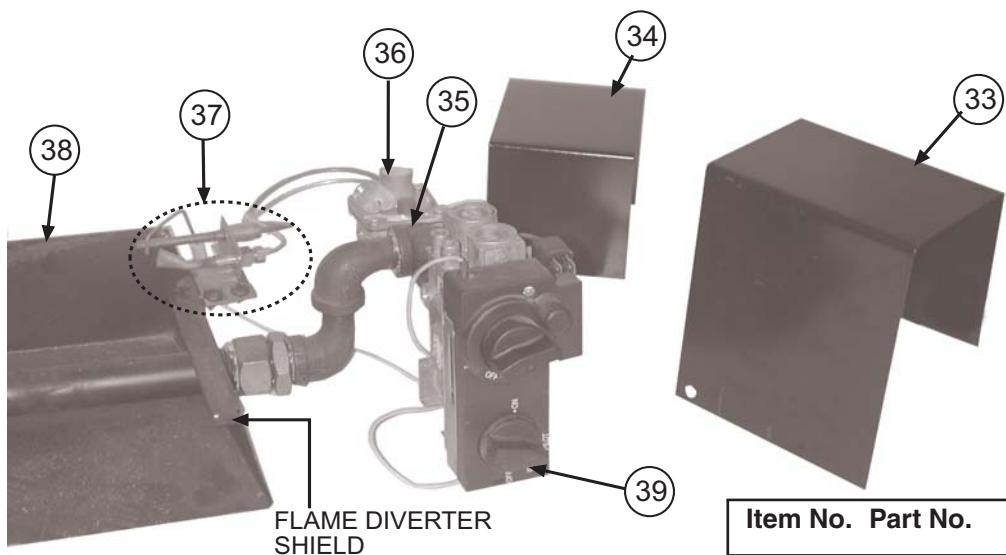


Item 40 Decorative
Wood Chunk
(not to scale)




Item No.	Part No.	Description
33.	Radiant Heat Shield	
34.	Regulator Heat Shield	
35.	Nipple, 3/8" X 3/8"	
36.	Pressure Regulator, Nat.Gas	
OR	Pressure Regulator, L.P. Gas	
37.	Pilot Assembly (Nat Gas)	
OR	Pilot Assembly (L.P. Gas)	
38.	G5 Burner Pan	
39.	Valve, Nat Gas	
OR	Valve, L.P.Gas	
40.	Decorative Wood Chunk (1/2)	
	* Where xx is burner size (e.g GG-24-0 for 24" burner, GG-30-0 for 30" burner etc)	

SAFETY CONTROL SYSTEM (Item No. 14) FOR 01 VALVE


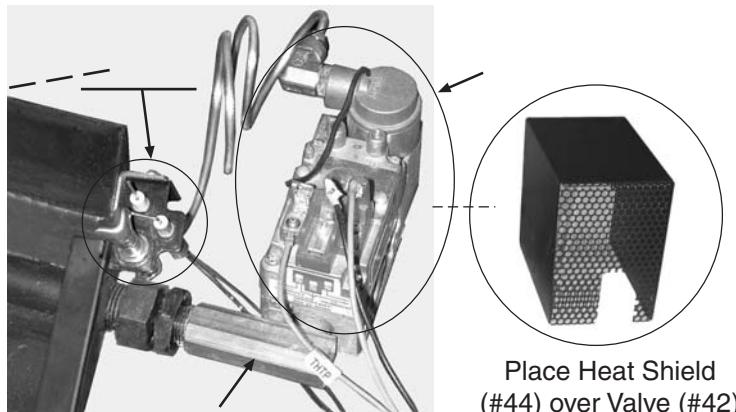
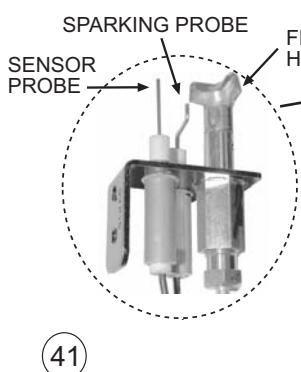


Item No.	Part No.	Description
41	Pilot Assembly(NAT)	
OR	Pilot Assembly(L.P.)	
42	Valve Assembly (Natural or L.P gas)	
43	Brass Adaptor w/o plug	
44	Heat Shield	
45	Pine Cone with switch (EPK-1)	
46	Wire Harness, 24"	
47	Ignition Module Pack	

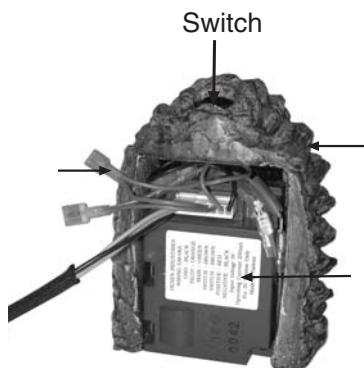

ALTERNATE CONTROLS

AUTOMATIC REMOTE LIGHTING SAFETY PILOT SYSTEM (11 VALVE)

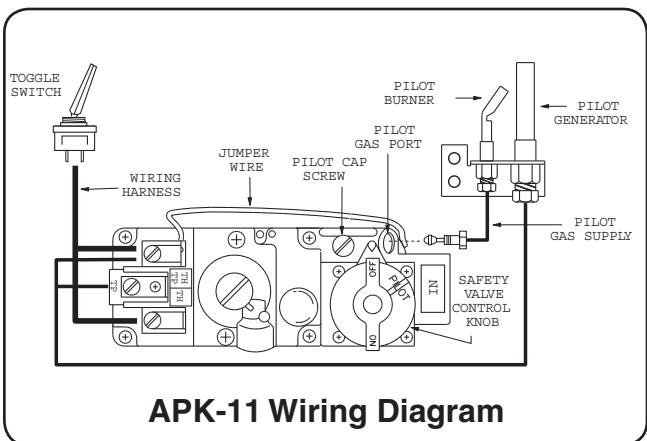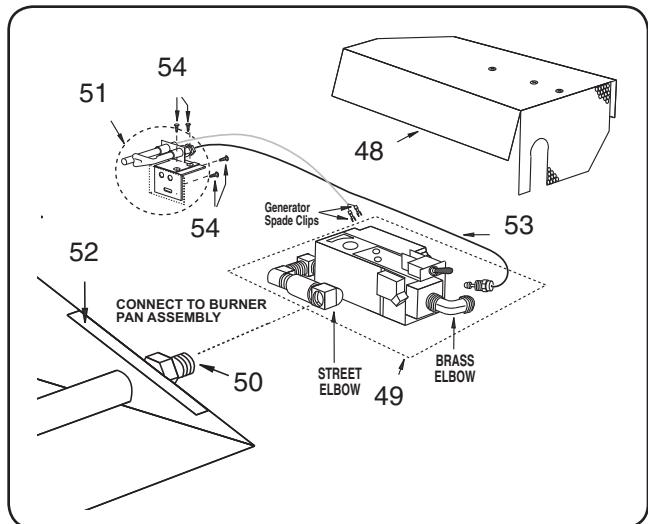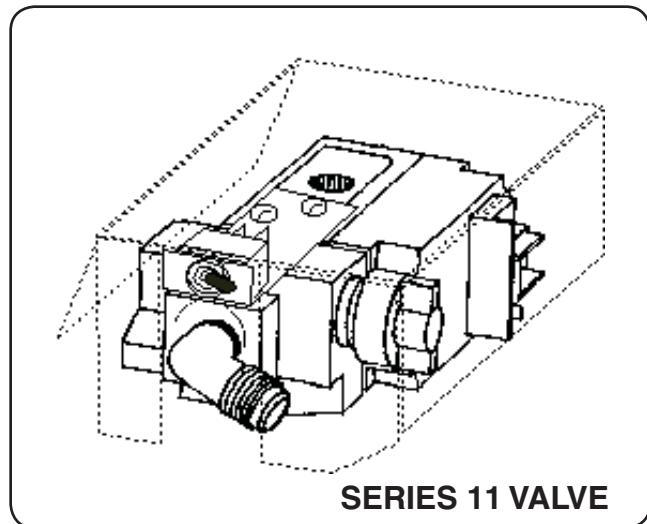

Item No.	Part No.	Description
48.	Heat Shield	
49.	Valve Assembly	
50.	Fuel Injector OR Air Mixer (supplied w/burner)	
51.	Pilot Assembly	
52.	Flame Diverter Bracket	
53.	Pilot Gas supply line	
54.	Screws, #10, blk (4)	

INSTALLATION OF YOUR GAS LOG SET

The Peterson Real-Fyre gas log set must be installed by an NFI Certified or other qualified, professional installer. Instructions must be followed carefully to insure proper performance and full benefit from your gas log set.

Peterson Real-Fyre gas logs must be installed only in a wood burning fireplace with the minimum venting requirements met (see Page 3). Check parts list to be sure all parts are included. Gas supply pipe must be 1/2" minimum interior diameter or larger. If the gas line is longer than 20', a larger diameter line may be necessary.

REFER TO PARTS LIST (PAGE 4) WHEN FOLLOWING THESE INSTRUCTIONS.

INSTALLATION OF BURNER

(be sure gas to the fireplace is off)

1. Remove the grate from the carton and attach the log locators to the 2 outer bars of the grate with bolts and nuts. The log locators should be positioned at the middle of the bars with bolt slots facing towards fireplace side walls (Figure 1). Do not tighten until after Step 4.
2. Connect the burner pan to the regulator inlet. Attach the smaller adaptor from the CK-5 kit to the end of the nipple behind the regulator on your manual, or 15 valve and tighten. For the 01 valve connect it to the brass elbow at the rear of the valve.
3. Place the burner assembly into the fireplace so the open burner pan faces to the room.

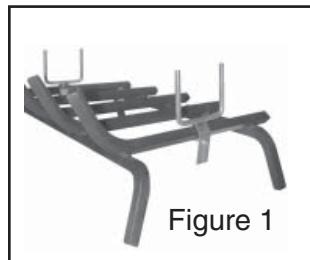


Figure 1

4. Place the grate over the burner pan so the log locator brackets fit over the back edge of the burner pan to lock it in position. Tighten the log locators into place.
5. Center this assembly in the fireplace and place it as far back in the fireplace as possible. Remove the grate for gas connection and granule placement.
6. Connect the larger adaptor from the CK-5 kit (Item 15a) to the gas supply and tighten. Using the CK-5 kit tubing, connect the gas supply to the small CK-5 elbow on the regulator or elbow (installed in step 2). Ensure the pan rests level on the fireplace floor after connection. Adjust the pan if necessary.
7. Turn on the gas to the fireplace and test for leaks with soapy water solution. (**Never use open flame for testing**).
8. Place the heat shield over the valve and regulator.

IMPORTANT: THE HEAT SHIELDS MUST BE IN PLACE DURING OPERATION OF THE GAS LOG SET. OVERHEATING OF THE VALVE WILL CAUSE SHUT DOWN OF GAS LOG SET OR OTHER OPERATING PROBLEMS.

NOTE: For 15 valve units, the decorative wood chunk is placed in front of valve for decorative purposes only.

Important For all valves, the air **MUST** be purged from the gas line before the pilot will light properly. The time taken to do this will depend on the length of gas line from the meter to the unit and the length of time since the unit or gas line was last used (in the case of non-use during warm weather for example). It may take from 3-10 minutes before all the air is purged and the pilot will light properly. To do this use the method used for lighting the pilot, which varies depending on which valve is fitted to the unit. Follow the lighting instructions in this manual for method.

GRANULE AND EMBER PLACEMENT

GRANULE PLACEMENT

With the burner off and the grate removed, fill the burner pan completely with **granules***. Slope the granules at the same angle as burner pan.

***NOTE: Use only select sand for natural gas burners and vermiculite for propane gas burners.**

EMBER PLACEMENT

Sprinkle embers lightly and evenly over entire surface of the granules. (When using with Charred Series log sets, refer to pages 10 - 11). Replace the grate so that the bottom tabs on the log-locator brackets fit over the back edge of the pan, locking it in position.

LOG PLACEMENT

LOG PLACEMENT

(for Charred Series see supplement instructions on pages 10 & 11)

Proper log placement is important to ensure proper performance of your Real-Fyre gas log set. Be sure to follow the log placement instructions carefully. Optional log placement patterns, an exclusive feature of Real-Fyre gas logs, are explained below.

REAL-FYRE GAS LOG SETS 18"-36"

PLACEMENT OF BOTTOM LOGS

Place the front and rear bottom logs (Logs #1 & #2) on the grate, with the longest log in front (Figure 2). The log locators insure that adequate space between the logs are maintained for a cleaner burn.

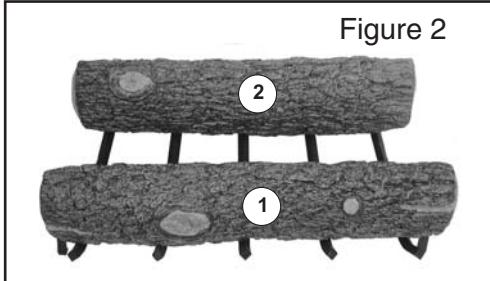


Figure 2

PLACEMENT OF MIDDLE AND TOP LOGS

Option 1: Place the two middle logs (Logs #3 & #4) on the bottom logs (Logs #1 & #2). The knotholes of the middle logs are placed over the space between the front and rear bottom logs (Figure 3). Top logs (Logs #5 & #6) are placed with one end resting near the knothole of the middle logs and the other resting on top of the front bottom log (Figure 4).

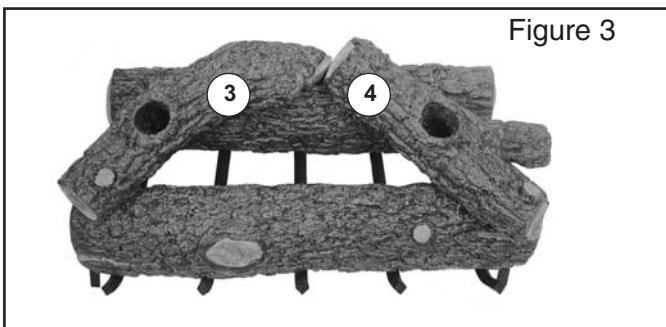


Figure 3

Option 2: Place the middle logs as instructed under Option 1 (Figure 3). Top log (Log #6) is then set with one end near a middle log knothole and the other end resting on the bottom front log. The other top log (Log #5) is set with one end near the knothole of the other middle log and the other end resting on the bottom rear log (Figure 5).

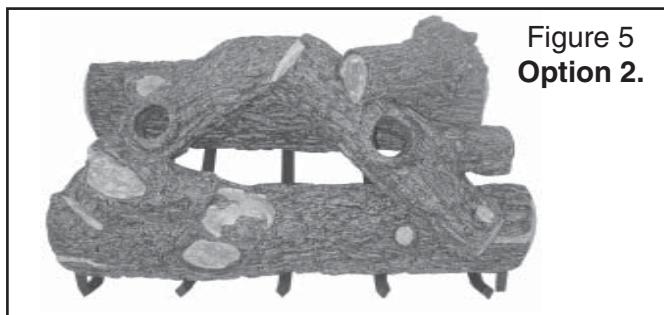


Figure 5
Option 2.

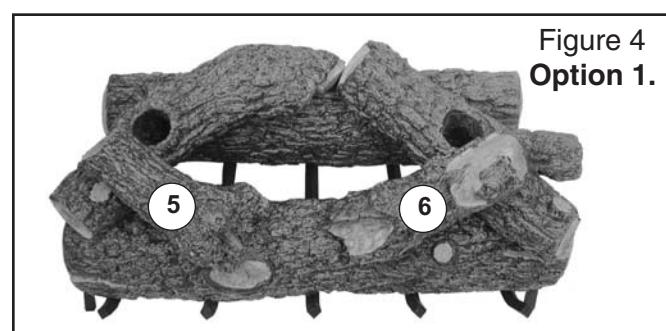


Figure 4
Option 1.

Option 3: Place the middle logs (Logs #3 & #4) so they are parallel, resting on the bottom logs with the knotholes over the space between the bottom logs. Place the top logs (Logs #5 & #6) parallel to each other across middle logs (Figure 6).

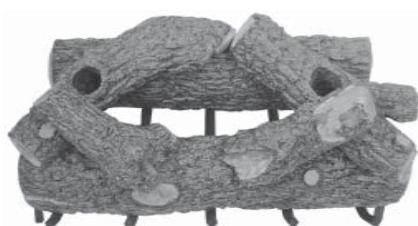


Figure 6
Option 3.


OPTIONAL PATTERNS LOG PLACEMENT SUMMARY

The three illustrations below show the three log placement patterns available for Real-Fyre C.S.A. Certified glowing embers gas log sets. The mirror image of each of the illustrations is also approved.

Option 1



Option 2

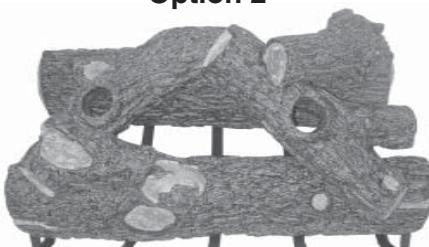

Option 3



LOG PLACEMENT (continued)

OPTIONAL BONUS LOG PLACEMENT

Your optional bonus log (Included with Emberwood Deluxe, Emberwood Deluxe Designer, Golden Oak Designer Plus and Split Oak Designer Plus Log Sets) should be placed directly above the front or rear bottom logs (Logs #1 and #2), so it does not extend into the space between the front and rear logs (Figure 7).

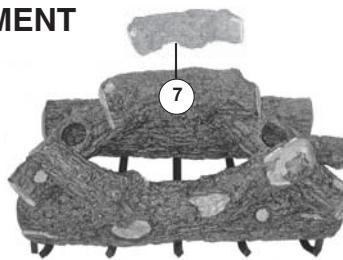


Figure 7
Bonus log
above
rear log

REAL-FYRE GAS LOG SETS 16"

Place the front and rear bottom logs on the grate (Figure 8). The face with the bark effect should face out into the room. The longest log is placed in front. The log locators insure that adequate space between the logs are maintained for a cleaner burn.



Figure 8



Figure 9

Place the front top log with one end resting on top of the front end of the left middle log. The other end will rest on the front bottom log. Place rear top log with one end resting on top of the back end of right middle log. The other end will rest on the rear bottom log (Figure 10).

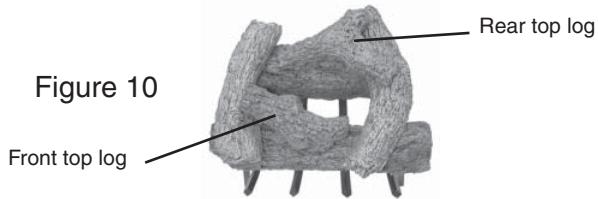


Figure 10


PLACEMENT OF MIDDLE AND TOP LOG

Place the left and right middle logs on the bottom logs as illustrated (Figure 9)

CHARRED SERIES INSTALLATION

EMBER COALS PLACEMENT

Attach the COALS FYREBED (Part No. CHD-01) to the burner by slipping it onto the back edge (center left to right) with the perforated section facing towards the back fireplace wall. (Figure 11a). Cover the surface of the COALS FYREBED with the EMBER COALS (Part No. EM-4, supplied with your Charred Series log set) (Figure 11b). For best glowing performance, they should be applied evenly and pulled slightly apart so the fibres are somewhat loose. (It is not necessary to pile the entire bag of the EMBER COALS. More EMBER COALS may be added after completion of the entire installation).

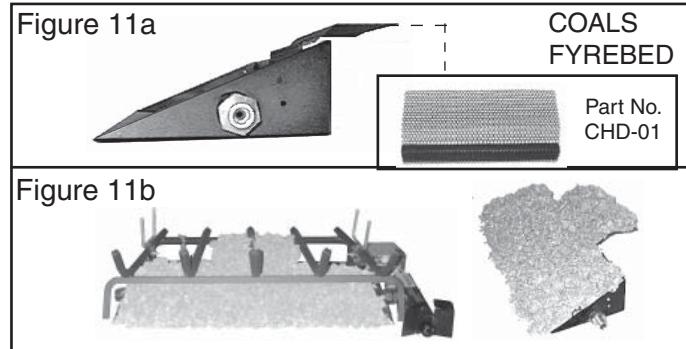

LOG PLACEMENT

Log styles and sizes will vary depending upon the Charred Series log set ordered.

CHARRED SPLIT OAK DESIGNER PLUS (SDP) layout shown.

Place the long bottom rear log (Log #2) on the back of the grate with the flat featureless side facing the rear of the fireplace. Slide it forward to touch the log locator. The two sections of the front log (Log #1A & 1B) are placed on the front of the grate with the charred sections facing each other and approximately one inch apart at the top (Figure 12). Slide them back against the log locators. The log locators insure that adequate space between front and rear logs are maintained for a cleaner burn.

Place the two curved logs (Logs #3 & #4) so that one end rests on each front log section (Log #1A

& 1B) and the other end rests on the rear log (Log #2). The charred sections should be over the opening between the front and rear logs. (Figure 13).

Place the small top charred logs (Log #5 & #6) so they rest over the charred sections of the front bottom log sections (Log # 1A & 1b) and on the two curved logs (Log #3 & #4) (Figure 14).

Finally, place the curved top charred log (Log #7) to rest on the two top logs at rear, but not encroaching into the space between rear and front logs (Figure 15).

Note: The additional top log (Log #7) is not available with 18" log sets.

LOG PLACEMENT (cont'd)



Figure 12



Figure 14



Figure 13

MAINTAIN A SPACE IN THE CENTER OF THE LOGS AT ALL TIMES

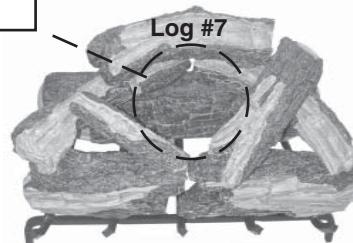


Figure 15

CAUTION: BURN HAZARD. LOGS WILL REMAIN HOT FOR SOME TIME AFTER USE. YOU MUST MAINTAIN THE LOG LAYOUT AS SHOWN TO ENSURE PROPER OPERATION OF YOUR LOG SET. IF YOU NEED TO REPOSITION ANY LOG TO MAINTAIN THE PROPER LAYOUT, USE HEAT RESISTANT GLOVES OR ALLOW LOGS ADEQUATE TIME TO COOL BEFORE HANDLING.

PILOT BURNER ADJUSTMENT

The pilot burner is preset at the factory and should normally not require any adjustment. However, should adjustment be necessary, the following steps should be taken:

With the pilot burner lit and the control knob in the pilot position, remove heat shield covers. Adjust screw located on the control valve (see Figure 16). Using a screwdriver, turn the pilot adjustment screw slowly clockwise to reduce the flame, or counterclockwise

to increase the flame. The adjustment screw can be turned so that the pilot flame is completely extinguished. The pilot flame should be a quiet soft blue flame with yellow tipping which encircles the thermocouple tip.

Replace heat shield covers. Turn the control knob to the 'ON' position to assure proper ignition of log set.



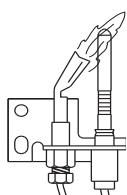


Figure 16

Example of burner pilot flame with thermocouple

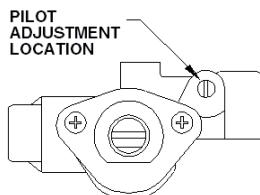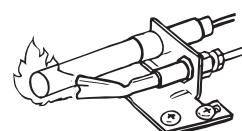

Example of burner pilot flame with thermopile

DAMPER CLAMP INSTRUCTIONS

The damper clamp with hex bolt (Figure 17) is provided as a means to prevent full closure of the damper blade. The clamp is easily attached to most damper blades with pliers or a wrench, and must be permanently installed. The clamp is designed to prevent accidental closure of the damper when installed as illustrated (Fig. 18a and Fig. 18b). The chimney damper must be fixed in a manner to maintain the permanent free opening (as specified in the table entitled MINIMUM FREE OPENING AREA OF CHIMNEY DAMPER FOR VENTING) at all times. Should the clamp not fit, or fail to provide the permanent vent opening listed, have a permanent

stop installed, remove the damper blade, or have the damper cut to provide the minimum permanent opening required.



Figure 17

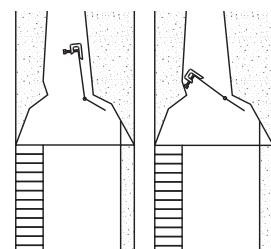


Figure 18a

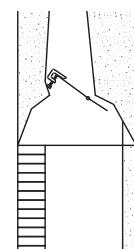


Figure 18b

POUR VOTRE SECURITE, LISEZ AVANT D'ALLUMER

* Nous recommandons qu'avant que vous installiez votre grosse bûche mise vous vous familiarisez avec la disposition de la valve du contrôle. Cela vous aidera pour être opérer plus confiant la grosse bûche mise quand a complètement installé (voyez des illustrations dessous pour control typique placez).

PRÉVENIR: Si vous ne suivez pas ces instructions exactement, un feu ou explosion peuvent résulter, en causant dégât de la propriété, blessure personnelle ou perte de vie.

Le l'ensemble de la grosse bûche du gaz a un pilote qui doit être allumé à la main. Quand allumer le pilote, suivez ces directives exactement

1. AVANT d'ALLUMER, sentez autour de la grosse bûche du gaz mis la région pour le gaz. Soyez sûr de sentir à côté du sol parce qu'un peu de gaz est plus lourd qu'air et résoudra par terre.

QUE FAIRE SI VOUS SENTEZ DU GAZ

- ouvrez une fenêtre
- essayez de ne pas allumer l'appareil
- ne touchez pas tout changement électrique, n'utilisez pas tout téléphone dans votre bâtiment
- Immédiatement appelez la forme du fournisseur du gaz le téléphone de votre voisin. Suivez les directives des fournisseurs du gaz

• Si vous ne pouvez pas atteindre votre fournisseur du gaz, contactez les sapeur-pompier

2. Utilisez seulement votre main pousser dans ou tourner le bouton de réglage du gaz. N'utilisez jamais des outils. Si le bouton ne poussera pas dans ou tourner à la main, n'essayez pas de le réparer. Appelez un technicien du service qualifié, professionnel. force ou a tenté la réparation peut résulter en feu ou explosion.

3. N'utilisez pas la grosse bûche du gaz mise si toute partie a été sous eau. Immédiatement appelez un qualifie, les prifessional entretiennent le technicien pour inspecter la grosse bûche du gaz mis et remplacer toute partie du système du contrôle et tout gaz contrôlent qui a été sous eau.

ALLUMANT DIRECTIVES POUR MANUEL G5

1. ARRÊTEZ! Lisez l'information de la sécurité au-dessus.

5. Tournez dans le sens inverse des aiguilles d'une montre le bouton sur le contrôle du gaz pour 'PILOTE'.

2. Poussez légèrement dans le bouton de réglage du gaz et éteignez à comme les aiguilles d'une montre (Chiffre 19). NOTE: Le bouton ne peut pas être éteint de 'PILOTE' à à moins que le bouton soit poussé dans légèrement. Ne forcez pas.

6. Poussez dans le bouton de réglage tout le chemin et retenez. Immédiatement allumez le pilote avec un briquet du butane du longneck ou un long égal. Continuez à retenir le bouton de réglage pour approximativement un (1) minute après que le pilote soit allumé. Publiez le bouton et il crèvera dehors en arrière. Le pilote devrait rester allumé. S'il sort, répétition pas 3 à travers 6.

* Si le bouton ne crève pas dehors quand a publié, arrêt et immédiatement appelle votre technicien du service ou fournisseur du gaz.


* Si le pilote ne restera pas allumé après plusieurs essais, éteindre le bouton de réglage du gaz à et appeler votre technicien du service ou fournisseur du gaz.

3. Attendez cinq (5) minutes éclaircir dehors tout gaz. Si vous alors gaz de l'odeur, ARRÊT! Suivez le "nombre 1" dans l'information de la sécurité. Si vous ne sentez pas de gaz, allez au prochain pas.

7. Le bouton de réglage du gaz du tour dans le sens inverse des aiguilles d'une montre à 'SUR' allumer votre ensemble. Le brûleur principal allumera au Btu maximal.

4. Trouvez le pilote - suivez le tube du métal du contrôle du gaz. Le pilote est précité le tube du brûleur derrière la grosse bûche de devant.

8. Périodiquement vérifiez la flamme pilote (Illus. 20) pour modèle de la flamme adéquat.

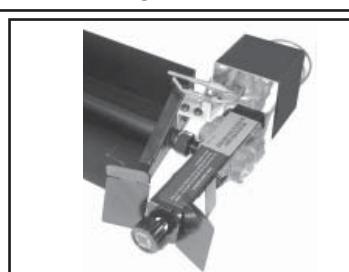

1. POUR ALLUMER - Tournez le robinet jusqu'à la 'position d'arrêt' ↘ et attendez 5 minutes avant d'allumer.

POSITION D'ARRET VEILLEUSE POSITION DE MARCHÉ



1. Utilisez la 'position d'arrêt' ↘ seulement lorsqu'il est nécessaire d'éteindre complètement l'appareil.



2. Tourner le cadran à la position 'veilleuse' ↘ . Avec une allumette prete, appuyez sur le robinet et tenez-le pendant 60 secondes tout en allumant la veilluse.



3. Tourner le robinet en 'position de marche' ↘ afin d'allumer le brûleur.

Illustration 19F

Éteindre l'ensemble de la grosse bûche du gaz

1. Du sur place, tournez comme les aiguilles d'une montre le bouton de réglage à la place pilote. ↗ L'ensemble de la grosse bûche éteindra et le pilote restera allumé.

2. Si la fermeture complète est désirée, de la place pilote, poussez légèrement dans le bouton de réglage et tournez comme les aiguilles d'une montre à la position fermée. ↗ ↘ Ne forcez pas bouton.

FOR YOUR SAFETY, READ BEFORE LIGHTING

* We recommend that before you install your log set you familiarize yourself with the control valve layout. This will help you to be confident operating the log set when fully installed (see Figures below for typical control positions).

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life. The Peterson Real-Fyre gas log set has a pilot which must be lit by hand. When lighting the pilot, follow these instructions exactly.

1. **BEFORE LIGHTING**, smell all around the gas log set area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS


- Open a window.
- Do not try to light the appliance.
- Do not touch any electrical switch, do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

2. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it. Call a qualified, professional service technician. Force or attempted repair may result in fire or explosion.


3. Do not use the gas log set if any part has been under water. Immediately call a qualified, professional service technician to inspect the gas log set and to replace any part of the control system and any gas control which has been under water.

LIGHTING INSTRUCTIONS FOR G5 MANUAL

1. **STOP!** Read the safety information above.
2. Push in the gas control knob slightly and turn clockwise  to 'OFF' (Figure 19). NOTE: The knob cannot be turned from 'PILOT' to 'OFF' unless the knob is pushed in slightly. Do not force.

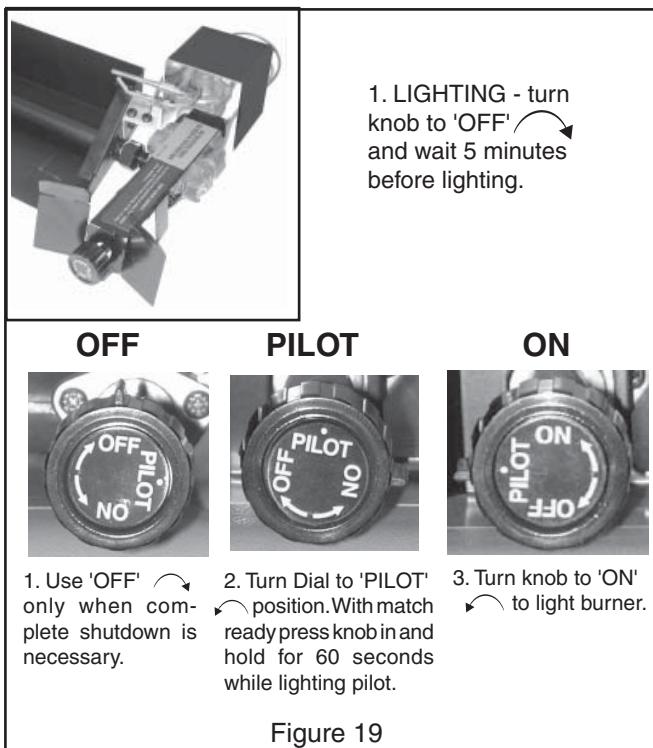

3. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "1" in the safety information above. If you don't smell gas, go to the next step.
4. Find pilot - follow the metal tube from the gas control. The pilot is above the burner tube behind the front log.
5. Turn the knob on the gas control counterclockwise  to 'PILOT'.
6. Push in the control knob **all the way and hold in**. Immediately light the pilot with a longneck butane lighter or a long match. Continue to hold the control knob in for approximately one (1) minute after the pilot is lit. Release the knob and it will pop back out. The pilot should remain lit. If it goes out, repeat steps 3 through 6.

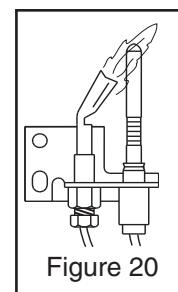

*If the knob does not pop out when released, stop and immediately call your service technician or gas supplier.

*If the pilot will not stay lit after several tries, turn the gas control knob to 'OFF' and call your service technician or gas supplier.

7. Turn gas control knob counterclockwise  to 'ON' to light your set. The main burner will ignite at the maximum BTU's.
8. Periodically check the pilot flame (Figure 20) for proper flame pattern.

TO TURN OFF THE GAS LOG SET

1. From the 'ON' position, turn the control knob clockwise  to the 'PILOT' position. The log set will extinguish and the pilot will remain lit.
2. If complete shutdown is desired, from the 'PILOT' position, push in the control knob slightly and turn clockwise  to the 'OFF' position. Do not force the knob.

POUR VOTRE SECURITE, LISEZ AVANT D'ALLUMER

* Nous recommandons qu'avant que vous installiez votre grosse bûche mise vous vous familiarisez avec la disposition de la valve du contrôle. Cela vous aidera pour être opérer plus confiant la grosse bûche mise quand a complètement installé (voyez des Illustrations dessous pour contrôles typiques placés).

PRÉVENIR: Si vous ne suivez pas ces instructions exactement, un feu ou explosion peuvent résulter, en causant dégât de la propriété, blessure personnelle ou perte de vie.

Le l'ensemble de la grosse bûche du gaz a un pilote qui doit être allumé à la main. Quand allumer le pilote, suivez ces directives exactement

1. AVANT d'ALLUMER, sentez autour de la grosse bûche du gaz mis la région pour le gaz. Soyez sûr de sentir à côté du sol parce qu'un peu de gaz est plus lourd qu'air et résoudra par terre.

QUE FAIRE SI VOUS SENTEZ DU GAZ

- ouvrez une fenêtre
- essayez de ne pas allumer l'appareil
- ne touchez pas tout changement électrique, n'utilisez pas tout téléphone dans votre bâtiment
- Immédiatement appelez la forme du fournisseur du gaz le téléphone de votre voisin. Suivez les directives des

fournisseurs du gaz

- Si vous ne pouvez pas atteindre votre fournisseur du gaz, contactez les sapeur-pompier

2. Utilisez seulement votre main pousser dans ou tourner le bouton de réglage du gaz. N'utilisez jamais des outils. Si le bouton ne poussera pas dans ou tourner à la main, n'essayez pas de le réparer. Appelez un technicien du service qualifié, professionnel. force ou a tenté la réparation peut résulter en feu ou explosion.

3. N'utilisez pas la grosse bûche du gaz mise si toute partie a été sous eau. Immédiatementappelez un qualifié, les professionnels entretiennent le technicien pour inspecter la grosse bûche du gaz mis et remplacer toute partie du système du contrôle et tout gaz contrôlent qui a été sous eau.

DIRECTIVES du ÉCLAIRAGE

1. ARRÊTER Lu l'information de sécurité ci-dessus.

2. Éteignez n'importe quel appareil électrique (comme le Peterson Air Circulator Chaud ou n'importe quel Système de Télécommande) si utilisé avec le jeu de rondin.

3. Enlevez "le BOUCLIER DE CHALEUR RADIANTE".

4. La poussée dans le Bouton de commande Ignitor, tournez-vous dans le sens des aiguilles d'une montre → "Fermé" de la position. Tournez le Contrôle de Hauteur de Flamme Variable dans le sens des aiguilles d'une montre → "Fermé" de la position.

5. Attendre cinq (5) minutes pour nettoyer n'importe quel gaz. Si vous sentez alors le gaz, ARRÉTEZ-VOUS! SUIVEZ "nombre 1" dans l'information de sécurité ci-dessus. Si vous ne sentez pas de gaz, allez au pas suivant.

6. Trouvez le pilote. Suivez le tube de métal du contrôle du gaz. Le pilote est placé à l'arrière juste de casserole de brûleur.

7. Pour allumer le pilote, tournez le bouton de l'ignitor de position fermée, comme les aiguilles d'une montre → vers "Ignition" jusqu'à atteindre l'arrêt. Appuyez le Bouton Ignitor dans et tenez-vous pendant 5 secondes (seulement le gaz pilote coulera).

8. Continuer à tenir le bouton dans, tourner le Bouton de commande Ignitor au "PILOTE" pour activer le piezo ignitor (vous devriez entendre un clic, le pilote devrait allumer). Continuez à tenir le Bouton Ignitor dans pendant 30 secondes après que le pilote est allumé. Libérez le bouton Ignitor et il passera reculent. Le pilote devrait rester allumé. S'il sort, répétez des pas 5 à 8.

• Si le bouton ne surgit pas quand libéré, s'arrête et appelle immédiatement votre technicien de maintenance ou le fournisseur du gaz.

• Si le pilote ne resteront pas allumés après plusieurs essais, tourneront le bouton de commande du gaz "Ferme" d'et appeleront votre technicien de maintenance ou le fournisseur du gaz.

9. Tourner le Bouton Ignitor en sens ↘ inverse des aiguilles d'une montre au "SUR".

10. Avec le pilote a allumé, la tourne le Contrôle de Hauteur de Flamme vers 'SUR' (en sens inverse des aiguilles d'une montre) ↘ . Désiré la hauteur de flamme et la production de chaleur. Remplacez "le bouclier de chaleur radiante"

11. Si un appareil électrique est utilisé avec le jeu de rondin, allumez ou reconnectez cet appareil.

Notez: si le pilote doive éteindre ou vous voudriez manu-ellelement vous éteindre la valve voit le pas #3 ci-dessous.

Si cette unité était embarquée avec un extérieur, ou si un système à distance était installé plus tard, lisez et suivez les instructions à distance séparées d'actionner le brûleur à distance.

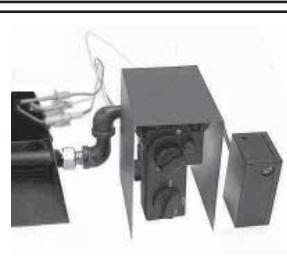


Illustration 21F

1. L'ÉCLAIRAGE - tourne tous les boutons "OFF" ↘ d'et attend 5 minutes avant l'éclairage.

POSITION D'ARRET



1. L'utilisation "DE" ↘ quand on désire l'arrêt complet.

VEILLEUSE



2. La tournure ↘ Compose à "IGN", la poussée dans et la tournure à la position "PILOT". Appuyez le bouton dans et tenez-vous pendant 60 secondes en vous allumant le pilote.

POSITION DE MARCHE



3. Bouton de tournure "à SUR". ↘ Allumer le brûleur tournez le Bouton de Hauteur de Flamme Variable vers "SUR"

FERMER LE GAZ TRONÇONNE L'ENSEMBLE

1. Éteindre toute l'énergie électrique pour Réchauffer Air Circulator ou le Système de Télécommande si le service doit être exécuté.
2. Placez éloigné ou le commutateur dans "Ferme" la position. Tournez le Contrôle de Flamme Variable au "Ferme". Le pilote restera allumé.
3. Si on désire l'arrêt complet, la proximité "le bouclier de chaleur radiante". Poussée dans le bouton Ignitor et la tournure dans le sens des aiguilles d'une montre "Ferme" de position. Remplacez "le bouclier de chaleur radiante".

FOR YOUR SAFETY, READ BEFORE LIGHTING

* We recommend that before you install your log set you familiarize yourself with the control valve layout. This will help you to be confident operating the log set when fully installed (see Figures below for typical control positions).

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

The Peterson Real-Fyre gas log set has a pilot which must be lit by hand. When lighting the pilot, follow these instructions exactly.

1. **BEFORE LIGHTING**, smell all around the gas log set area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Open a window.
- Do not try to light the appliance.
- Do not touch any electrical switch, do not use any phone in your building.
- Immediately call your gas supplier from a

neighbor's phone. Follow the gas supplier's instructions.

- If you cannot reach your gas supplier, call the fire department.
- 2. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it. Call a qualified, professional service technician. Force or attempted repair may result in fire or explosion.
- 3. Do not use the gas log set if any part has been under water. Immediately call a qualified, professional service technician to inspect the gas log set and to replace any part of the control system and any gas control which has been under water.

LIGHTING INSTRUCTIONS 15(P) VALVE

1. **STOP** Read the safety information above.
2. Turn 'OFF' any electrical appliance (such as the Peterson warm air circulator or any remote control system) if used with the log set.
3. Remove the "RADIANT HEAT SHIELD".
4. Push in ignitor control knob, turn clockwise ↘ to 'OFF' position (Figure 21). Turn variable flame height control clockwise ↗ to 'OFF' position.


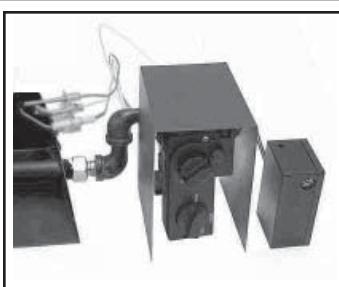


Figure 21

1. LIGHTING - turn all knobs to 'OFF' ↘ and wait 5 minutes before lighting.

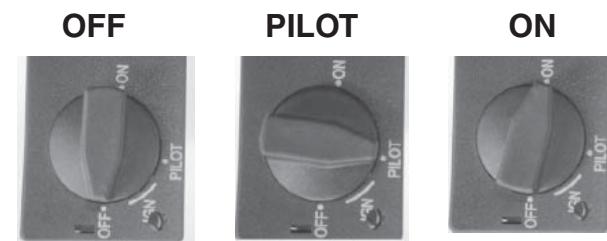

1. Use 'OFF' ↘ when complete shutdown is desired.
2. Turn Dial ↘ to 'IGN', push in and turn to 'PILOT' position. Press knob in and hold for 60 seconds while lighting pilot.
3. Turn knob ↗ to 'ON'. To light burner turn Variable Flame Height Knob towards 'ON' ↗

5. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! FOLLOW "1" in the safety information above. If you don't smell gas, go to the next step.
6. Locate the pilot. Follow the metal tube from the gas control. Pilot is located at the right rear of burner pan.
7. To light pilot, turn ignitor knob, from 'OFF' position, clockwise towards 'IGN' until reaching stop. Press ignitor knob in and hold for 5 seconds (only pilot gas will flow).
8. Continue holding knob in, turn the ignitor control knob to 'PILOT' to activate the piezo ignitor (you should hear a click, pilot should light). Continue to hold ignitor knob in for 30 seconds after pilot is lit. Release ignitor knob and it will pop back up. The pilot should remain lit. If it goes out, repeat steps 5 through 8.
- If the knob does not pop up when released, stop and immediately call your service technician or gas supplier.
- If the pilot will not stay lit after several tries, turn the gas control knob to 'OFF' and call your service technician or gas supplier.
9. Turn ignitor knob counterclockwise ↗ to 'ON'.
10. With the pilot lit, turn the flame height control towards 'ON' (counterclockwise) ↗ to desired flame height and heat output.

Replace the "Radiant Heat Shield"

11. If an electrical appliance is used with the log set, turn on or reconnect that appliance.

Note: If the pilot should extinguish or you would like to manually turn off the valve see step #3 below.

If this unit was shipped with a remote, or if a remote system was installed later, read and follow the separate remote instructions to operate the burner remotely.

TO TURN OFF THE GAS LOG SET

1. Turn off all electric power to warm air circulator or remote control system if service is to be performed.
2. Place remote or switch in 'OFF' position. Turn variable flame control to 'OFF'. The pilot will remain lit.
3. If complete shutdown is desired, remove the "RADIANT HEAT SHIELD". Push in the ignitor knob and turn clockwise ↘ to the 'OFF' position. Replace the "radiant heat shield".

POUR VOTRE SECURITE, LISEZ AVANT D'ALLUMER

* Nous recommandons qu'avant que vous installiez votre grosse bûche mise vous vous familiarisez avec la disposition de la valve du contrôle. Cela vous aidera pour être opérer plus confiant la grosse bûche mise quand a complètement installé (voyez des Illustrations dessous pour contriol typique placez).

PRÉVENIR: Si vous ne suivez pas ces instructions exactement, un feu ou explosion peuvent résulter, en causant dégât de la propriété, blessure personnelle ou perte de vie.

Le l'ensemble de la grosse bûche du gaz a un pilote qui doit être allumé à la main. Quand allumer le pilote, suivez ces directives exactement

1. AVANT d'ALLUMER, sentez autour de la grosse bûche du gaz mis la région pour le gaz. Soyez sûr de sentir à côté du sol parce qu'un peu de gaz est plus lourd qu'air et résoudra par terre.

QUE FAIRE SI VOUS SENTEZ DU GAZ

- ouvrez une fenêtre
- essayez de ne pas allumer l'appareil
- ne touchez pas tout changement électrique, n'utilisez pas tout téléphone dans votre bâtiment
- Immédiatement appelez la forme du fournisseur du gaz le téléphone de votre voisin. Suivez les directives des fournisseurs du gaz

• Si vous ne pouvez pas atteindre votre fournisseur du gaz, contactez les sapeur-pompier

2. Utilisez seulement votre main pousser dans ou tourner le bouton de réglage du gaz. N'utilisez jamais des outils. Si le bouton ne poussera pas dans ou tourner à la main, n'essayez pas de le réparer. Appelez un technicien du service qualifié, professionnel. force ou a tenté la réparation peut résulter en feu ou explosion.

3. N'utilisez pas la grosse bûche du gaz mise si toute partie a été sous eau. Immédiatementappelez un qualifie, les prifessional entretiennent le technicien pour inspecter la grosse bûche du gaz mis et remplacer toute partie du système du contrôle et tout gaz contrôlent qui a été sous eau.

INSTRUCTIONS POUR LA MISE EN MARCHE DU DISPOSITIF D'ALLUMAGE FACULTATIF


- 1. ARRETEZ!** Lisez les renseignements de sécurité ci-dessus.
- Arrêtez 'OFF' tout appareil électrique (tel le Circulateur d'Air Chaud de Peterson) s'il utilisé avec l'ensemble de bûches.
- Vérifiez le commutateur (a marqué "je" = amorcez; "O" = "Fermé") a localisé sur le Cône du Pin décoratif soyez mis à "O." Ne forcez pas

- Attendez cinq (5) minutes afin de laissez se dissiper tout résidu de gaz. Si vous sentez alors du gaz, **ARRETEZ! SUIVEZ L'OPERATION "1"** des consignes de sécurité ci-dessus. Si vous ne sentez pas de gaz, procédez à l'opération suivante.
- Pressez le commutateur ("je" = AMORCEZ) sur le sommet du Cône du Pin décoratif. Cela transmet une série rapide d'étincelles à la tête pilote. Ces étincelles cessent quand la flamme pilote est allumée et est logée dans une écurie. Le pilote est localisé au bon coin arrière du programmeur. Après peu de temps le pilote le programmeur principal allumera.

PRUDENCE: SI L'ENSEMBLE du GAZ AMORCE PAS DANS 20 SECONDES, ARRÊTEZ, ÉTEIGNEZ LE COMMUTATEUR À, ATTENDEZ ALORS 5 MINUTES RÉPÉTITION ÉTAPES 3-6

- Normalement, le pilote devrait rester allumé. S'il sort, répétition étape 3 à travers 6.
- Si le pilote ne restera pas allumé après plusieurs essais, éteignez le commutateur du cône du pin à (Figure 3) et appelle votre technicien du service ou fournisseur du gaz.
- Périodiquement vérifiez la flamme pilote pour modèle de la flamme propre (Image 20).
- Pour éteindre l'ensemble, pressez le ("O" = FERMÉ) commutateur sur le Cône du Pin. La circulation du gaz cessera et toutes les flammes sortiront.

Si cette unité était embarquée avec un extérieur, ou si un système à distance était installé plus tard, lisez et suivez les instructions à distance séparées d'actionner le brûleur à distance.

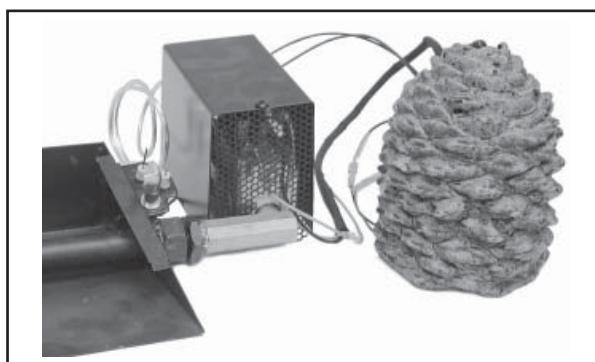

1. ALLUMER - Chèque le commutateur (a marqué "je" = amorcez; "O" = "Fermé") a localisé sur le Cône du Pin décoratif soyez mis à "O." Attendez du gaz 5 min pour éclaircir deho~



Image 22F

1. Pressez "O" (= FERMÉ) quand l'arrêt de fin de session complet est désiré.



2. Pressez "je" (=Amorcez) Après une série d'étincelles rapides le pilote allumera. Quand le pilote est stable, le programmeur principal amorcera.

FERMER LE GAZ TRONÇONNE L'ENSEMBLE

- Éteignez le pouvoir tout électrique à l'Air Cha1. Éteignez le pouvoir tout électrique à l'Air Chaud Circulator (ou usagé) si le service sera exécuté.
- Mettez le commutateur dans "DE" position (voyez-en 7 au-dessus). L'ensemble du journal éteindra et piloter sortira.

FOR YOUR SAFETY, READ BEFORE LIGHTING

* We recommend that before you install your log set you familiarize yourself with the control valve layout. This will help you to be confident operating the log set when fully installed (see Figures below for typical control positions).

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

The Peterson Real-Fyre gas log set has a pilot which must be lit by hand. When lighting the pilot, follow these instructions exactly.

1. **BEFORE LIGHTING**, smell all around the gas log set area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.


WHAT TO DO IF YOU SMELL GAS

- Open a window.
- Do not try to light the appliance.
- Do not touch any electrical switch, do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.


- If you cannot reach your gas supplier, call the fire department.
- 2. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it. Call a qualified, professional service technician. Force or attempted repair may result in fire or explosion.
- 3. Do not use the gas log set if any part has been under water. Immediately call a qualified, professional service technician to inspect the gas log set and to replace any part of the control system and any gas control which has been under water.

LIGHTING INSTRUCTIONS 01(P) VALVE

1. **STOP!** Read the safety information above
2. Turn 'OFF' any electrical appliance (such as the Peterson warm air circulator) if used with the log set.

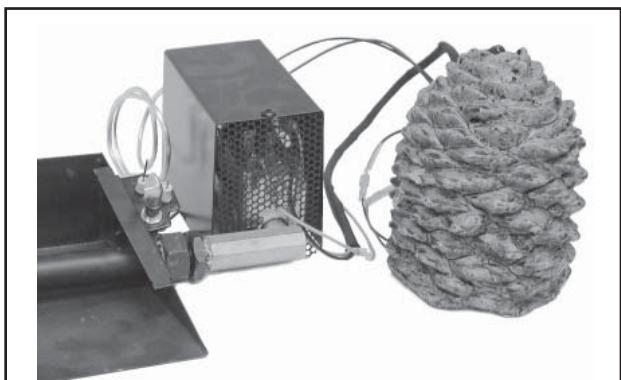

1. LIGHTING - Check the switch (marked "I" = Ignite; "O" = Off) located on top of the decorative Pine Cone is set to "O". Wait 5 minutes for gas to clear out.

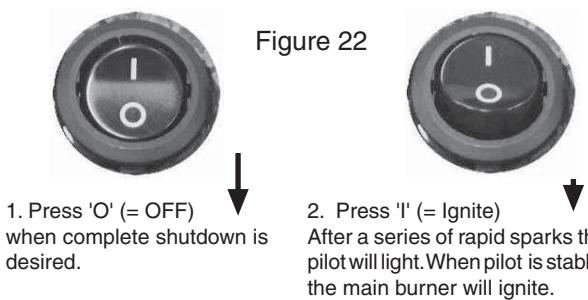

3. Check the switch (marked "I" = Ignite; "O" = Off) located on top of the decorative pine cone is set to 'O'. Do not force.
4. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "1" in the safety information above. If you don't smell gas, go to the next step.
5. Press the switch ("I" = IGNITE) on the top of the decorative pine cone. This transmits a rapid series of sparks at the pilot head. These sparks cease when the pilot flame is lit and stable. The pilot is located at the rear right corner of the burner (see Item 14 Part List on page 6). After a short time the pilot will light the main burner.

CAUTION: IF THE GAS SET DOES NOT IGNITE WITHIN 20 SECONDS, STOP, TURN THE SWITCH TO "OFF", WAIT 5 MINUTES THEN REPEAT STEPS 3-6

- Normally, the pilot should remain lit. If it goes out, repeat step 3 through 6.
- If the pilot will not stay lit after several tries, turn the pine cone switch to 'OFF' (Figure 22) and call your service technician or gas supplier.
- 6. Periodically check the pilot flame for proper flame pattern (Figure 20).
- 7. To turn the set 'OFF', press the ("O"= OFF) switch on top of the pine cone. The gas flow will cease and all flames will go out.

If this unit was shipped with a remote, or if a remote system was installed later, read and follow the separate remote instructions to operate the burner remotely.

TO TURN OFF THE GAS LOG SET

1. Turn off all electric power to the warm air circulator (where used) if service is to be performed.
2. Put the switch in 'OFF' position (see 7 above). Log set will extinguish and pilot will go out.

POUR VOTRE SECURITE, LISEZ AVANT D'ALLUMER

* Nous recommandons qu'avant que vous installiez votre grosse bûche mise vous vous familiarisez avec la disposition de la valve du contrôle. Cela vous aidera pour être opérer plus confiant la grosse bûche mise quand a complètement installé (voyez des illustrations dessous pour contriol typique placez).

PRÉVENIR: Si vous ne suivez pas ces instrucions exactement, un feu ou explosion peuvent résulter, en causant dégât de la propriété, blessure personnelle ou perte de vie.

Le l'ensemble de la grosse bûche du gaz a un pilote qui doit être allumé à la main. Quand allumer le pilote, suivez ces directives exactement

1. AVANT d'ALLUMER, sentez autour de la grosse bûche du gaz mis la région pour le gaz. Soyez sûr de sentir à côté du sol parce qu'un peu de gaz est plus lourd qu'air et résoudra par terre.

QUE FAIRE SI VOUS SENTEZ DU GAZ

- ouvrez une fenêtre
- essayez de ne pas allumer l'appareil
- ne touchez pas tout changement électrique, n'utilisez pas tout téléphone dans votre bâtiment
- Immédiatement appelez la forme du fournisseur du gaz le téléphone de votre voisin. Suivez les directives des fournisseurs du gaz

• Si vous ne pouvez pas atteindre votre fournisseur du gaz, contactez les sapeur-pompier

2. Utilisez seulement votre main pousser dans ou tourner le bouton de réglage du gaz. N'utilisez jamais des outils. Si le bouton ne poussera pas dans ou tourner à la main, n'essayez pas de le réparer. Appelez un technicien du service qualifié, professionnel. force ou a tenté la réparation peut résulter en feu ou explosion.

3. N'utilisez pas la grosse bûche du gaz mise si toute partie a été sous eau. Immédiatementappelez un qualifie, les prifessional entretiennent le technicien pour inspecter la grosse bûche du gaz mis et remplacer toute partie du système du contrôle et tout gaz contrôlent qui a été sous eau.

INSTRUCTIONS POUR LA MISE EN MARCHE DU DISPOSITIF D'ALLUMAGE FACULTATIF

1. ARRÊTEZ! Lisez l'information de la sécurité au-dessus.

2. Éteignez tout appareil électrique (tel que le Peterson Air Chaud Circulator) si usagé avec l'ensemble du journal.

3. Vérifiez le commutateur à bascule (a localisé devant proche de valve) soyez installés-vous le "FERMÉ" placeposition (Image 24)

4. Attendez cinq (5) minutes éclaircir dehors tout gaz. Si vous alors gaz de l'odeur, **ARRÊT! SUIVEZ-EN** au-dessus 1" dans l'information de la sécurité. Si vous ne sentez pas de gaz, allez à la prochaine étape.

5. Tournez le Bouton de la Valve de la Sécurité à la position PILOTE. Poussez pleinement le Bouton de la Valve de la Sécurité dans (alignez avec le "L" dans "PILOTE") et en même temps place un long égal ou un briquet du butane au programmateur pilote. Le pilote allumera. Le pilote est localisé au bon coin arrière du programmateur. Retenez le Bouton de la Valve de la Sécurité pour approximativement 60 seconde

PRUDENCE: SI L'ENSEMBLE du GAZ AMORCE PAS DANS 20 SECONDES, ARRÊTEZ, ÉTEIGNEZ LE COMMUTATEUR À, ATTENDEZ ALORS 5 MINUTES RÉPÉTITION ÉTAPES 3-6.

• Normalement, le pilote devrait rester allumé. S'il sort, répétition étape 3 à travers 6.

• Si le pilote ne reste pas allumé, tournez le Bouton de la Valve de la Sécurité au plein "FERMÉ" position. Attendez cinq minutes et répétez les directives de l'éclairage.

6. Avec le Pilote allumé, permettez au Bouton de la Valve de la Sécurité de crever au-dessus, alors tournez-le au "SUR" position.

Retournez l'Interrupteur de la Bascule au "SUR" (EN HAUT) la position et le gaz enregistrent l'ensemble allumera.

7. Périodiquement chèque flamme pilote pour modèle de la flamme propre (Image 20).


8. Pour éteindre votre Ensemble du Journal du Gaz, retournez l'Interrupteur de la Bascule à "FERMÉ" (En bas) position. Le pilote restera allumé.

9. Pour éteindre le Pilote, soyez sûr l'Interrupteur de la Bascule est "FERMÉ", légèrement diminuer et tourne le Bouton de la Valve de la Sécurité au "FERMÉ" position.

Si cette unité était embarquée avec un extérieur, ou si un système à distance était installé plus tard, lisez et suivez les instructions à distance séparées d'actionner le brûleur à distance.

1. ALLUMER - Chèque le changement de l'interrupteur (a localisé près du devant de la valve) soyez installés-vous le "FERMÉ" place. Attendez du gaz 5 min pour éclaircir dehors.

LISEZ LE CADRE ICI

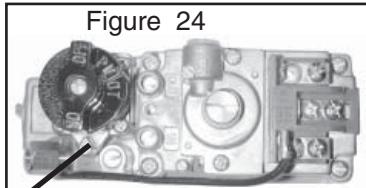

1. Quand la fermeture complète est désirée, retournez le Change-ment de l'Interrupteur à "FERMÉ", légère-ment déprimez et tournez le Bouton de la Valve de la Sécurité à "DE" place
2. Tournez le Bouton de la Valve de la Sécurité à la place PILOTE, Bouton de la poussée complètement dans. Manuellement pilote léger. Retenez le Bouton de la Valve de la Sécurité pour approximativement 60 secondes.
3. Avec le Pilote allumé, permettez à Bouton de la Valve de la Sécurité de crever au-dessus, alors tournez-le à "SUR" place. Retournez le Change-ment de l'Interrupteur au "SUR" (EN HAUT) place. L'ensemble de la grosse bûche du gaz allumera.

FERMER LE GAZ TRONÇONNE L'ENSEMBLE

1. Éteignez le pouvoir tout électrique à l'Air Chaud Circulator (où usagé) si le service sera exécuté.

2. Éteignez le Changement de l'Interrupteur à, légèrement déprimez et tournez le Bouton de la Valve de la Sécurité à "DE" place. L'ensemble de la grosse bûche éteindra et pilote sortira.

FOR YOUR SAFETY, READ BEFORE LIGHTING

* We recommend that before you install your log set you familiarize yourself with the control valve layout. This will help you to be confident operating the log set when fully installed (see Figures below for typical control positions).

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

The Peterson Real-Fyre gas log set has a pilot which must be lit by hand. When lighting the pilot, follow these instructions exactly.

1. **BEFORE LIGHTING**, smell all around the gas log set area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Open a window.
- Do not try to light the appliance.
- Do not touch any electrical switch, do not use any phone in your building.

- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.


2. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it. Call a qualified, professional service technician. Force or attempted repair may result in fire or explosion.
3. Do not use the gas log set if any part has been under water. Immediately call a qualified, professional service technician to inspect the gas log set and to replace any part of the control system and any gas control which has been under water.

LIGHTING INSTRUCTIONS 11(P)

1. **STOP!** Read the safety information above.
2. Turn 'OFF' any electrical appliance (such as the Peterson warm air circulator) if used with the log set.
3. Check toggle switch (located near front of valve) is set in the 'OFF' position (Figure 24). Check the safety valve knob is in the 'OFF' position. Do not force.

4. Wait five (5) minutes to clear out any gas. If you then smell gas, **STOP! FOLLOW "1"** in the safety information above. If you don't smell gas, go to the next step.
5. Turn the safety valve knob to the 'PILOT' position. Push the safety valve knob fully in (align with the "L" in "PILOT") and at the same time place a long match or a butane lighter at the pilot burner. The pilot will light. The pilot is located at the rear right corner of the burner (see Item 14 Part List on page 6). **Hold the safety valve knob in** for approximately 60 seconds.

CAUTION: IF THE GAS SET DOES NOT IGNITE WITHIN 20 SECONDS, STOP, TURN THE SWITCH TO 'OFF', WAIT 5 MINUTES THEN REPEAT STEPS 3-6

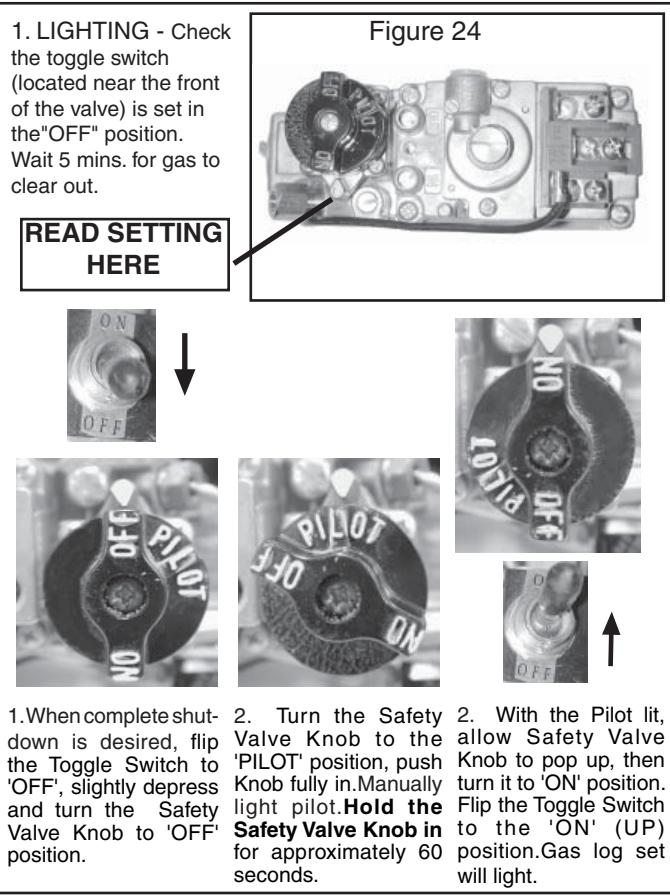

- Normally, the pilot should remain lit. If it goes out, repeat step 3 through 6.
- If the pilot does not stay lit, turn the safety valve knob to the full 'OFF' position. Wait five minutes and repeat the lighting instructions.
6. With the pilot lit, allow the safety valve knob to pop up, then turn it to the 'ON' position. Flip the toggle switch to the 'ON' (UP) position and the gas log set will light.
7. Periodically check pilot flame for proper flame pattern (Figure 20).
8. **To turn off your gas log set**, flip the toggle switch to 'OFF' (Down) position. Pilot will remain lit.
9. **To turn off the pilot**, be sure the toggle switch is 'OFF', slightly depress and turn the safety valve knob to the 'OFF' position.

If this unit was shipped with a remote, or if a remote system was installed later, read and follow the separate remote instructions to operate the burner remotely.

TO TURN OFF THE GAS LOG SET

1. Turn off all electric power to the warm air circulator (where used) if service is to be performed.
2. Switch the toggle switch to 'OFF', slightly depress and turn the safety valve knob to 'OFF' position. Log set will extinguish and pilot will go out.

WARRANTY

PETERSON VENTED GAS LOG SETS LIMITED WARRANTY

All Peterson gas logs are **WARRANTED** for as long as you own them (lifetime).

All Peterson burner assemblies are **WARRANTED** for **TEN (10) YEARS**.

SPK-26 controls are covered by a **THREE (3) YEAR "All Parts" Warranty**.

All other Peterson valves, pilots, and controls are covered by a **ONE (1) YEAR Limited Warranty (excluding batteries)**.

PLEASE KEEP A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE

This warranty applies to the original purchaser and to single family residential use only. It commences from date of purchase, and is valid only with proof of purchase.

This warranty does not cover parts becoming defective through misuse, accidental damage, electrical damage, improper handling, storage, and/or installation. Product must be installed (and gas must be connected) as specified in the instructions or operator's manual, by a **qualified professional installer**. Accessories, parts, valves, remotes, etc., when used must be Peterson Co. product.

This warranty **does not** apply to rust, corrosion, oxidation, or discoloration, unless the affected component becomes inoperable. It **does not** cover labor or labor-related charges.

This warranty specifically excludes liability for **indirect, incidental**, or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights, and you may have other rights that may vary from state to state.

For additional information regarding this warranty, or to place a warranty claim, contact the R.H. Peterson dealer where the product was purchased.

FOR USE IN THE COMMONWEALTH OF MASSACHUSETTS

**INSTALLATION OF THIS APPLIANCE MUST BE PERFORMED BY A
MASSACHUSETTS LICENSED PLUMBER OR GAS FITTER ONLY.**

**CONNECTOR KITS USED FOR INSTALLATION AND OPERATION OF THIS
APPLIANCE MUST NOT BE MORE THAN 36" IN LENGTH.**

**FIREPLACE DAMPER MUST BE REMOVED OR PERMANENTLY
FIXED/WELDED IN FULL OPEN POSITION PRIOR TO
INSTALLING THIS PRODUCT.**

ROBERT H. PETERSON CO.

Quality Check

Date: _____

Orifice # (Main): _____

Orifice # (Other): _____

Leak Test: _____

Burn Test: _____

Gas Type: **NAT. / PROPANE**

Model #: _____

Serial #: _____

Air Shutter: _____

Inspector: _____